


# DOMO2 Base


The new DOMO2 from Telefonica is very different from the original DOMO telephone. It uses a combination of less buttons and a bigger viewer to provide most of the options available, which are accessed via a system of menus. While this may have many advantages, it does require the user to remember how to access these options - hence the 64 page manual that comes with the telephone.

The DOMO2 can be configured to display Viewer options in Castilian, Catalan, Euskara, Galego and Valencià languages, but unfortunately not in English, so this Rapid Guide is intended to help you find your way around the most-used Domo2 options.

## The telephone buttons explained

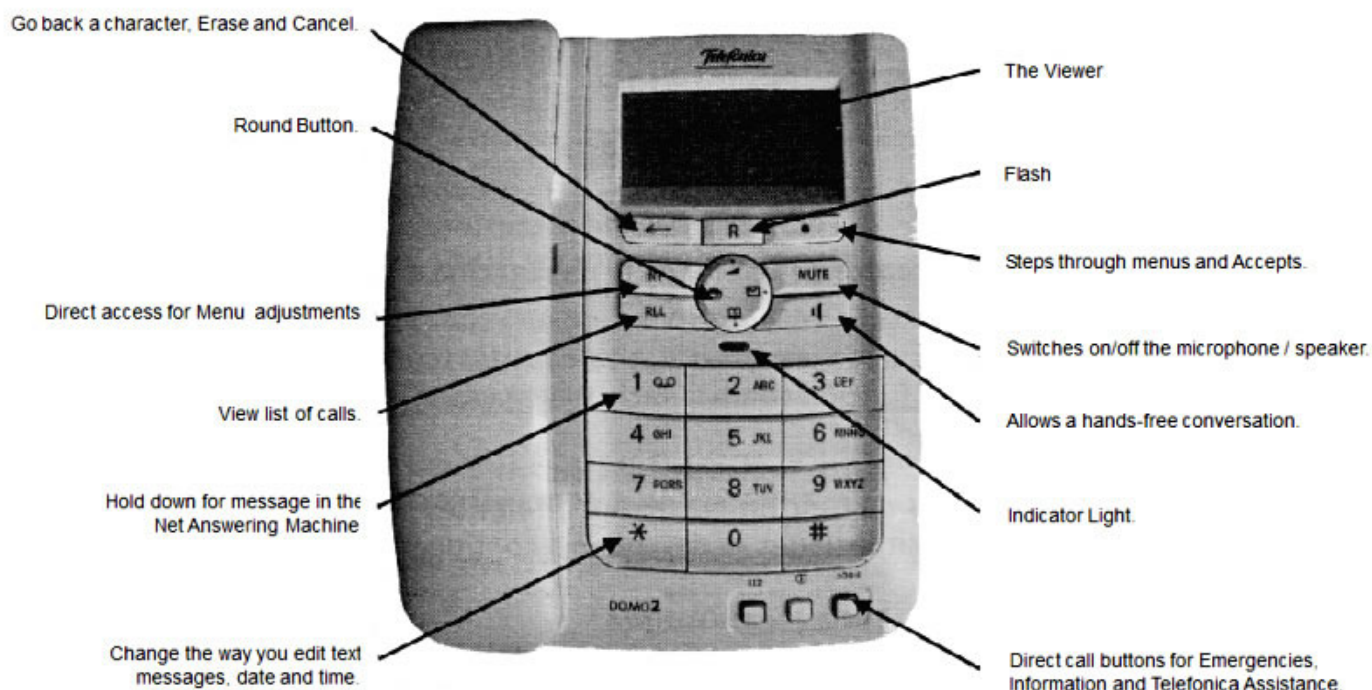


## The round button explained

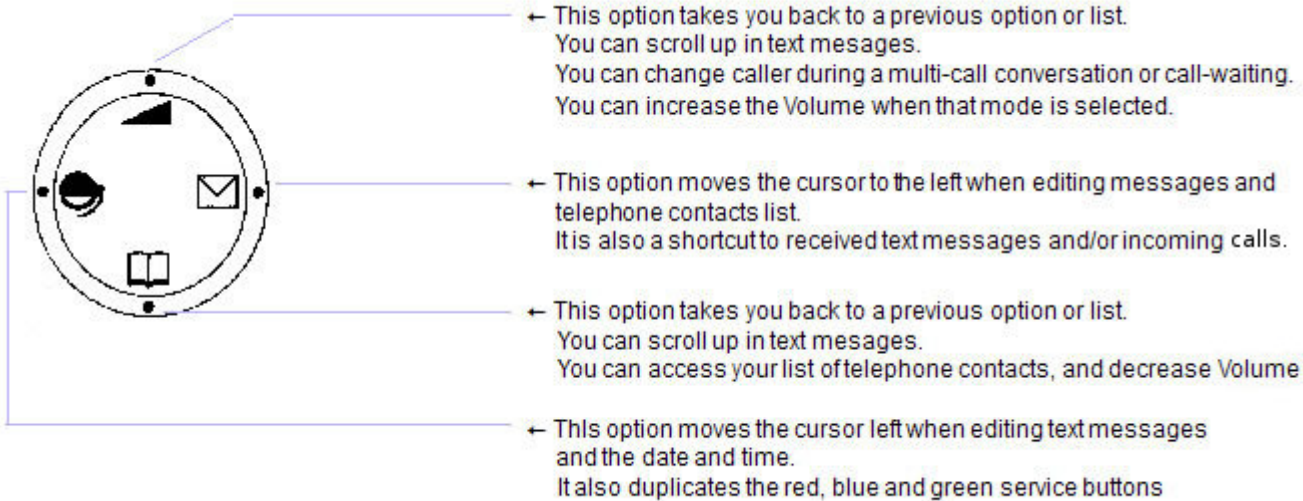

The options available from the round button will depend on the currently selected mode.

## The viewer explained

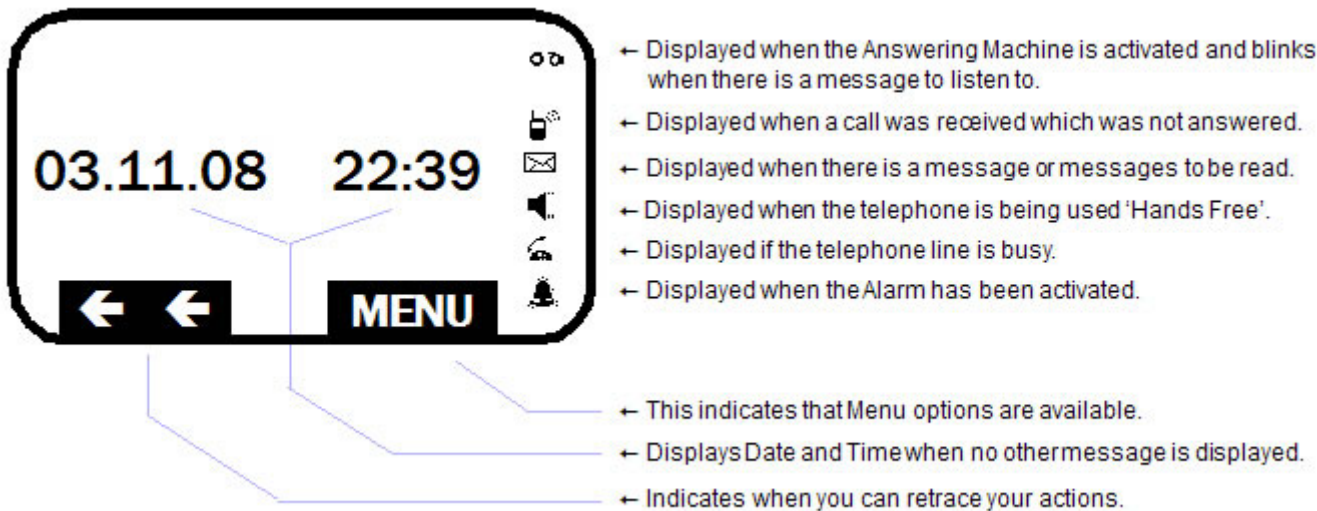

Only the text or illustrations appropriate to the currently selected mode will be displayed in the viewer.

## Handset adjustment

<b>Date and hour</b>	<p>With the handset down, press the • button for the menu. Use the 'Up' and 'Down' buttons (ramp and book icons) to display 'Ajustes' and press the • button to accept. Use the 'Up' and 'Down' buttons (ramp and book icons) to display 'Fecha y Hora' and press the • button. Enter the date as a string of 6 numbers - eg.170708 (without separators). Press the • button when complete. Enter 4 numbers as the time - eg.1626 (without separators). Press the • button to complete. Press the 'Left Arrow' button several times to return to the basic display.</p> <p><i>Some users find that the DOMO2 does not maintain the correct date and time, where the handset is connected to the Telefonica system via a radio connection.</i></p>
<b>Audio</b>	<p>With the handset down, press the • button for the menu. Use the 'Up' and 'Down' buttons (ramp and book icons) to display 'Ajustes'. Press the • button to accept. Use the 'Up' and 'Down' buttons (ramp and book icons) to display 'Audio' and press the • button to accept. You can access various Audio settings by pressing the • button to select, and the 'Up' and 'Down' button (ramp and book icons) to choose the settings for -</p> <ul style="list-style-type: none"> <li>— Volume</li> <li>— Melody</li> <li>— Advising tones.</li> </ul>
<b>Display contrast</b>	<p>With the handset down, press the • button for the menu. Use the 'Up' and 'Down' buttons (ramp and book icons) to display 'Ajustes'. Press the • button to accept. Use the 'Up' and 'Down' buttons to display 'Contraste'. Press the • button. Now use the 'Up' and 'Down' buttons to select one of the contrast settings and press the • button to complete.</p>

## Making a call

<b>Manually dialling</b>	<p>Press 'Hands Free' button (speaker icon) if you don't want to use the handset. Use the keypad to enter the desired telephone number. If a mistake is made, delete it by pressing the 'Left Arrow' button.</p>
<b>From phone book (agenda)</b>	<p>Pick up the handset or press the 'Hands Free' button (speaker icon) for hands free operation. Select the contact you wish to call by pressing the 'Agenda' (Phone Book) button (book icon) followed by the first letter of the person name. If you have more than one contact starting with that initial, use the 'Up' and 'Down' buttons (ramp and book icons) to scroll through the list. When the correct contact is displayed, press the 'Hands Free' button (speaker icon) and automatic dialling will start.</p>
<b>Re-dialling</b>	<p>Pick up the handset or press Hands Free button (speaker icon). Press the button and select the number with the 'Up' and 'Down' buttons (ramp and book icons). When the required name or number is displayed, press the 'Hands Free' button</p>

	(speaker icon) and wait for automatic dialling.
<b>Dialling a recent caller</b>	Select the MENU by pressing the 'Accept' button (●). Next use the 'Up' and 'Down' buttons (ramp and book) to display 'Lista Llamadas'. Press the 'Accept' button (●) and use the 'Up' and 'Down' buttons (ramp and book icons) to select the number or name of the recent caller. Press the 'Hands Free' button (speaker icon) to automatically dial.

## The Phone Book (Agenda)

<b>Store new contact</b>	Press the ● button for the menu, then 'Up and 'Down' buttons (ramp and book icons) until 'Agenda' is displayed. Press the ● button to accept. 'Nuevo registro' will be displayed. Press the ● button again.	From either the Menu or the Phone Book, complete the following details, pressing the ● button after each. <ul style="list-style-type: none"> <li>— Enter the number of new contact.</li> <li>— Enter the name of the contact number.</li> <li>— Select Group (if you want to).</li> <li>— Enter the extension for sending text messages (if you want to).</li> </ul>
--------------------------	---	--


*To enter a new contact's Name into the Phone Book (Agenda), press the number keys several times as necessary. So to display a 'C', press the '1' key 3 times. The '1' key pressed once produces a Space. The '#' key pressed 4 times gives an '&'. The '0' key displays a '.' and pressing it 7 times gives a '-'. The first letter of a Name will be upper-case followed by lower-case. To get an upper-case letter to start a second name or surname, press the '\*' key first. For all the other characters see the User Manual.*

<b>Delete a contact</b>	Select the record to be deleted. Press the ● button for the menu. Use the 'Up' and 'Down' buttons (ramp and book icons) to display 'Borrar Registro'. Press the ● button to delete the record selected.	
<b>Contact groups</b> <i>(Allows you store contacts under groups such as Family, Friends, Business, etc.)</i>	<b>Add to contact to a group</b>	Select the record in the Phone Book and press the ● button for the Menu. Use the 'Up' and 'Down' buttons (ramp and book icons) to display 'Modificar Registro'. Press the ● button to accept. Use the 'Up' and 'Down' buttons (ramp and book icons) to select the group most suitable for the contact and press the ● button to accept.
	<b>Changing to a group member</b>	Select the record in the Phone Book and press the ● button for the Menu. Use the 'Up' and 'Down' buttons (ramp and book icons) to display 'Modificar Registro'. Press the ● button to accept. Press the ● button against each item you make changes to, or to leave the record unchanged.

## View recent calls

<p><b>To view a single recent calls</b></p> <p><b>Or</b></p> <p><b>View all recent calls</b></p>	<p>To view received calls, first press the 'Accept' button (●) to view the MENU. Next press the 'Up' or 'Down' buttons (ramp and book icons) until 'Lista Llamadas' is displayed. Press the 'Accept' button (●) to accept, then use the 'Up' or 'Down' buttons (ramp and book icons) until the required recent caller is displayed.</p>
<p><b>To delete recent calls records</b></p>	<p>To use the Clear (delete) option, press the 'Accept' button (●) followed by the 'Up' or 'Down' buttons (ramp or book icons) to select either 'Borrar registro' (to clear all numbers) or 'Numero a la Agenda' (to clear the record displayed). Press the 'Accept' button (●) again and confirm.</p>

## Viewer menu system

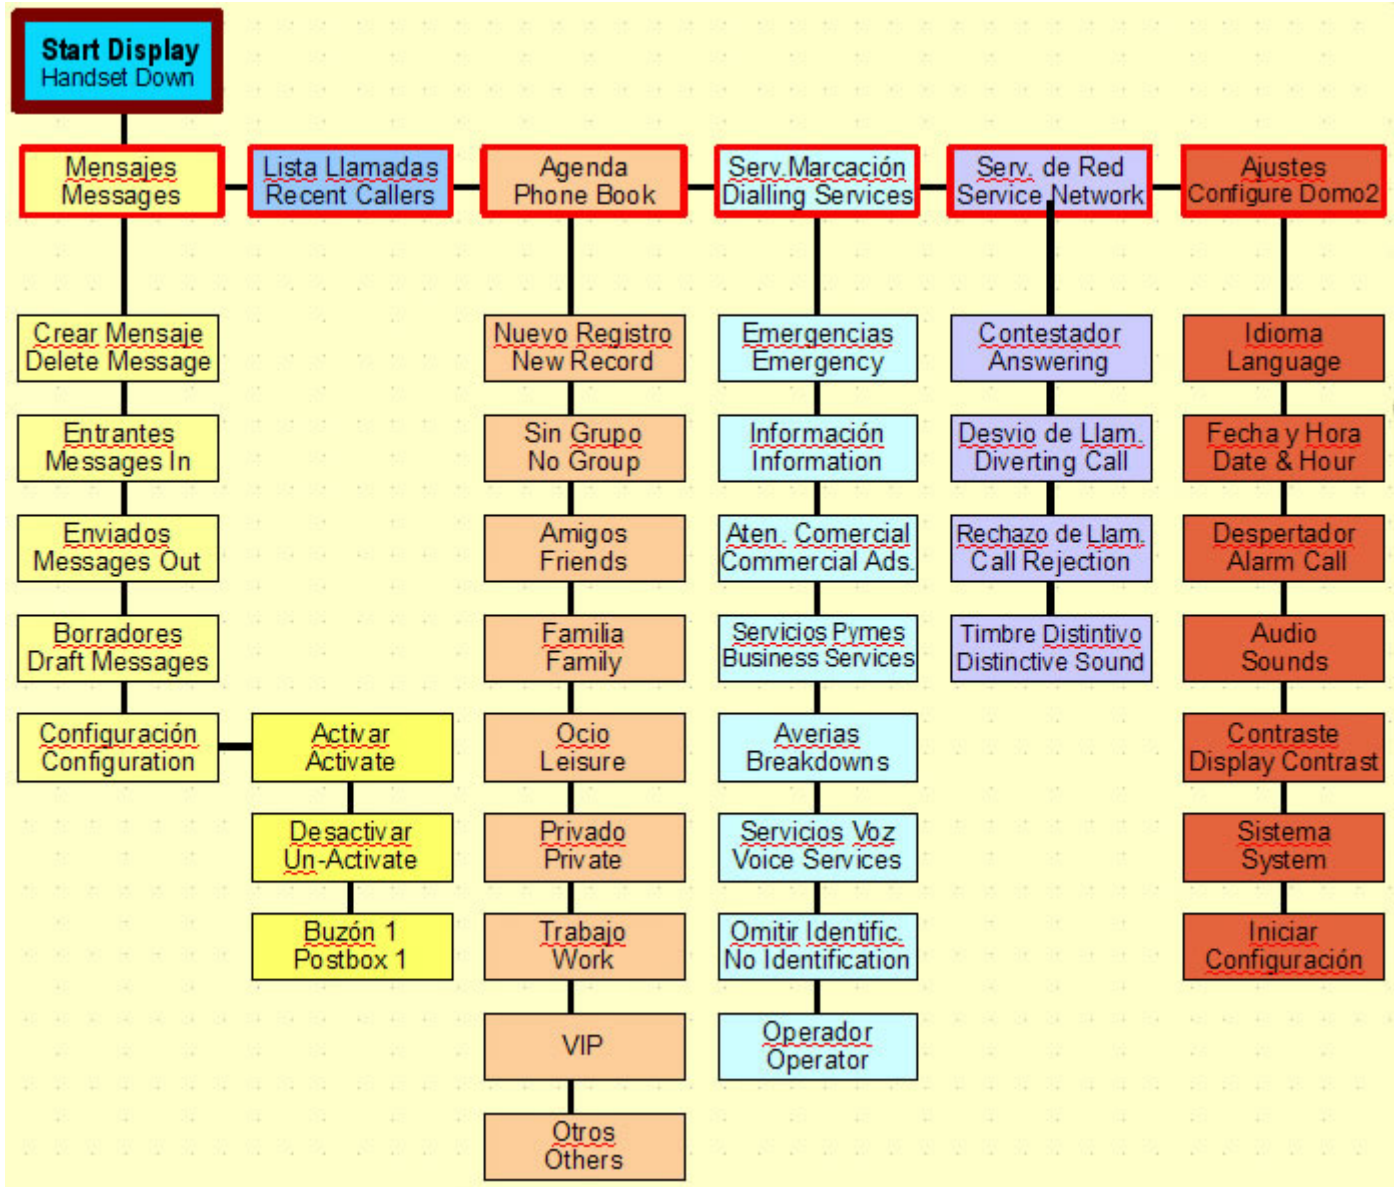

This chart shows the order in which the menu system is displayed in the Viewer.  
*(Each box in the chart shows the wording displayed, with the English translation underneath.)*

1. To access any option from the Start Display *(when the Viewer is showing the date & time)*, press the • button.
  2. Next, press the 'book' icon on the round button until the category required is displayed *(shown with red border above)*.
  3. Press the • button to accept your choice.
  4. Next, press the 'book' icon button again to scroll through the options shown in the colour groups above.
  5. Press the • button to accept your choice.
- Some options *(e.g. Configuration - as shown above)* provide additional choices. Use the • and 'book' buttons as necessary.

## The answering machine

<b>Machine can be switched on or off at any time -</b>	<b>To switch on (Activar)</b>	<p>Press the • button.                  Press the book icon on the round key until 'Serv.de Red' is displayed. Press • key.                  'Contestador' will be displayed. Press the • key.                  'Activar' is displayed. Press the • key.                  A cassette icon should now be displayed in the top right corner of the Viewer. This indicates the answering machine is switched on. This icon will blink when a message or messages are waiting to be listened to.</p>
	<b>To switch off (Desactivar)</b>	<p>Press the • button.                  Press the book icon on the round key until 'Serv.de red' is displayed. Press • Key.                  'Contestador' will be displayed. Press the • key.                  Press the book icon if necessary until 'Desactivar' is displayed. Press the • Key.</p>

<b>Receiving Messages</b>	<p>If you have switched the Answering Machine on, and you don't answer a call during the first 5 rings, the answering service will automatically start, inviting your caller to leave a message.</p>
<b>Listening to Messages</b>	<p>Listening to recorded messages can be done at any time. Simply lift the receiver and after a few seconds the dialling tone will stop and you will be told how many new messages there are.                  Then you will be told the day and time of the first message, and it will then be played. At the end of the message the system will stop until you select one of these options -</p> <p>Press 1 - to hear the message again.                  Press 2 - to store the message.                  Press 3 - the erase the message.</p> <p>The system will then move onto any other messages, one at a time, offering the same options for each.                  When you have listened to all the 'new' message, you will be offered any messages you stored previously. For each of these you have to press the 1, 2 or 3 keys as above.                  When you have listened to all the messages -</p>

	<p>Press 0 - to exit the system, or Press 1 - to change personal options (including the language)</p>
<p><b>Changing the Language</b></p>	<p>After having listened to any messages, press the 1 key to change personal settings. You will be asked to select one of these options -</p> <p>Press 1 - To change your message. Press 2 - To change your access code. Press 3 - To activate the advice time. Press 4 - To change language.</p> <p>Press the 4 key and you will be asked to enter your access code. Unless you have changed it, this will be 0000. To choose the required language -</p> <p>Press 1 - to select Spanish. Press 2 - to select regional Spanish languages. Press 3 - for other languages.</p> <p>Assuming you don't want a Spanish language, press 3 for 'other languages' and then -</p> <p>Press 1 - to select English. Press 2 - to select French. Press 3 - to select German.</p> <p>Finally - Press 1 to confirm your choice, or Press 2 to go back to make another choice.</p> <p>Replace the receiver. Your message service should now be in your chosen language.</p> <p><i>The procedure to change language (as listed above) has been checked with Telefonica a number of times, and should be correct.</i></p>